


Attachment B


GREENVILLE NC PD BUILD



GRILLE LIGHTS


Installer must make sure that factory provide front emergency light and Whelen light are sync together

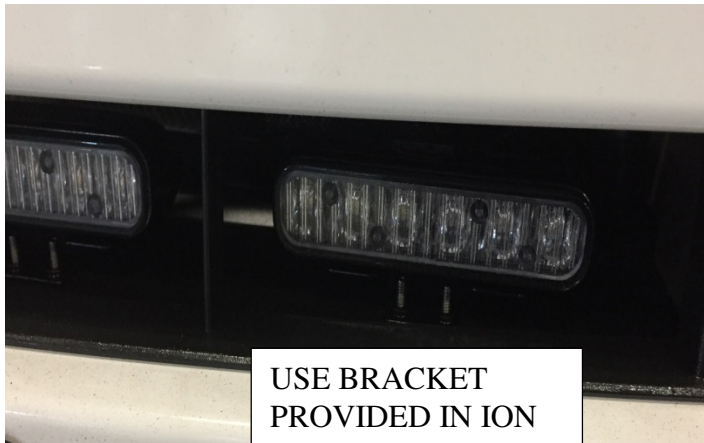

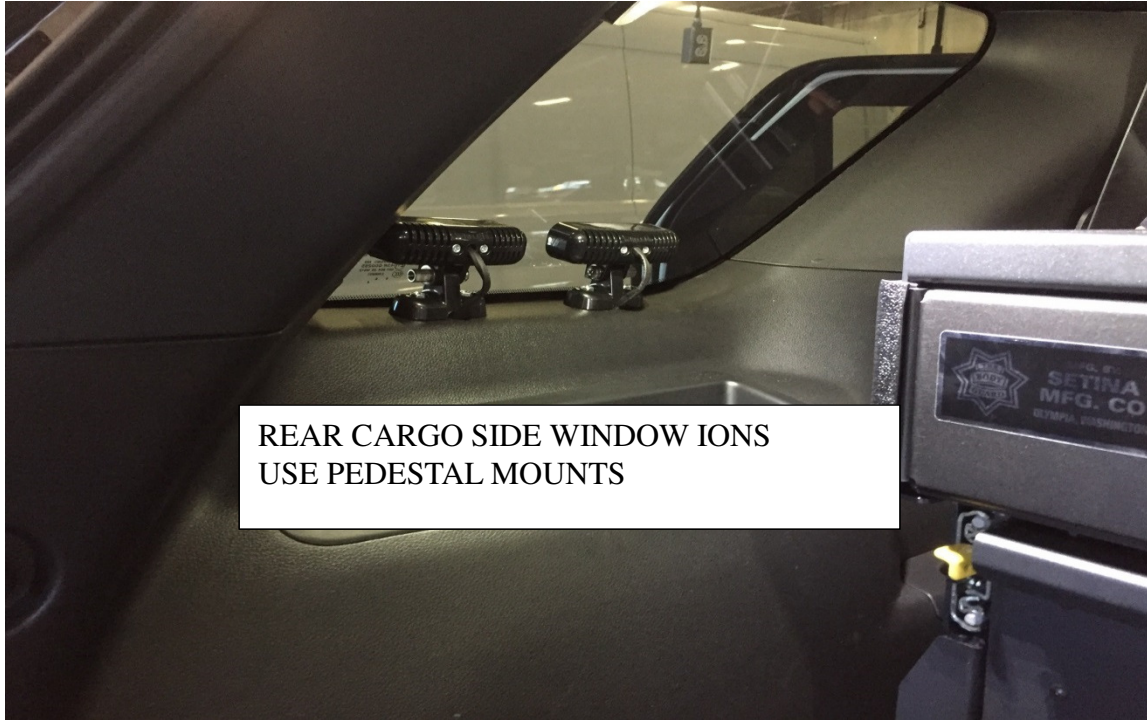

REAR CARGO SIDE WINDOW IONS
USE PEDESTAL MOUNTS

REAR L/R SIDE
CARGO WINDOW
LIGHTS

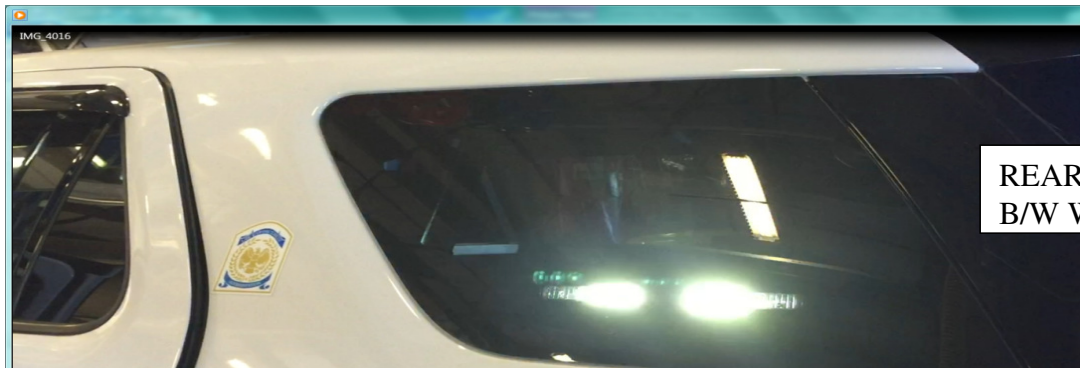

REAR CARGO WINDOW IONS
B/W W/B

License Plate Light



MICRON ON WINDOW BARRIER (BLUE) Only Upper ION need to be set to CRUISE LIGHTS



Blue/White ION

2/28/2018



Vault and computer storage

Computer storage area in bottom drawer. Fleet will install Fan. Installer will install charge guard and Havis Shield Integrated Module.



Rear Light bar with Traffic advisory must be included in the cruise light set up.



Factory Ford Provided Tailgate Lights must work when door is open



Whelen Tracer Lights need to be part of the cruise light set up. Holes for wiring must be sealed in accordance with Ford TSB 17-0044



REAR COMPARTMENT LIGHTS (ONE EACH SIDE)



R/W COMPARTMENT LIGHT INSTALL
IN UPPER PILLER OF CARGO AREA



3-POSITION ROCKER SWITCH FOR
R/W COMPARTMENT LIGHT ON
PASSENGER SIDE OF VEHICLE

Havis window kick panel for each rear passenger door



Setina rear molded seat and partition. Factory
Seat and seat belts must be ship back.



Setina single rifle mount. Must be wired to the last momentary switch on the Whelen siren switch box. The USB for the printer must be install and connected to docking station in vault. Power outlets and USB outlets must be wire to fuse block in center console.



CONSOLE


Install Key board and stand. Prep for Motorola Radio which should include power, ground and antenna cable. All equipment shall be ignition switch on.



Havis Shield Integrated Display System. Must be sure it works with Ford radio and A/C Heating control.



Whelen Upper Front Interior Light Bars.

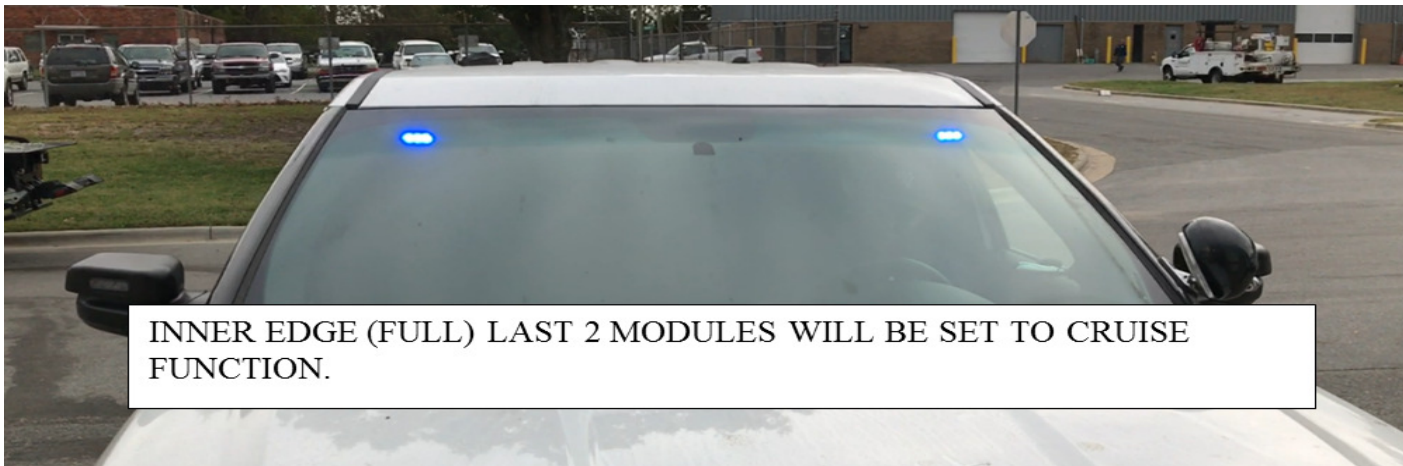


INNER EDGE (FULL) LAST 2 MODULES WILL BE SET TO CRUISE FUNCTION.

Automate Fuel wiring shall be ran from drive side of dashboard to passenger rear cargo area. Hole shall be properly sealed according to Ford Specifications and there should be at least a 1FT service loop at each end.



Motorola antenna must be mounted on D-pillar passenger side rear window with antenna facing the cargo window and run to center console

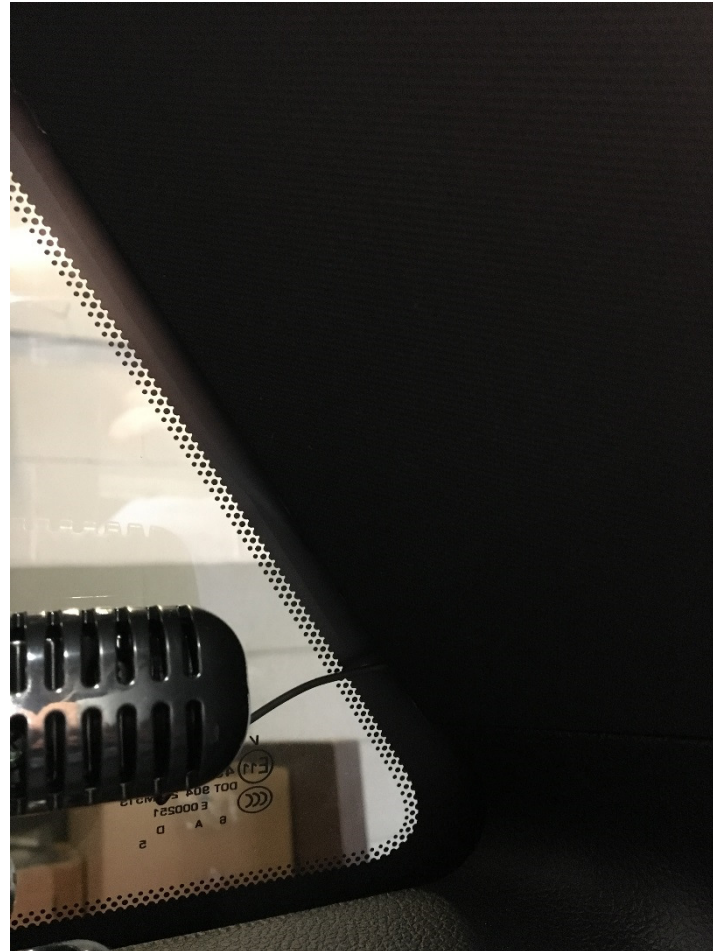

Fuse panel

